

DINOSAUR ELECTRONICS

(541) 994-4344

Instructions for the UIB S Rev. 10

This board should be installed by trained service technicians

This board comes from the factory configured as:

- Delayed, 3-try**
- 20 sec. delay, 6 sec. fire, 20 sec. between fire cycles**
- local flame sense
- 0.3 microamp flame sensitivity

**When the instant fire jumper is cut, the purge time between fire cycles is changed to 1 minute.

